

Neat Pad

Generation 2 (8-inch)

A1



neat.

User manual

Neat Pad Generation 2

Touch interface device



Neat Pad Generation 2 keeps meetings moving. As a meeting room controller or scheduling display, it gives teams instant, familiar control and IT a simple, scalable way to standardize rooms across every space.

Compact and intuitive, it delivers a consistent experience that just works. Neat Pad Generation 2 comes with everything you need to get quickly up and running.

In the box


Neat Pad Generation 2
Hex key: 2 mm
Ethernet cable: 9.8 ft (3 m)
Warranty book

Optional Neat accessories

Wall, side, and glass mount kit
Ethernet cable: 16.4 ft (5 m)
PoE power supply*


*If using an alternative PoE power source, it must be compliant with the IEEE 802.3 af/at/bt PoE standard.

Mounting options

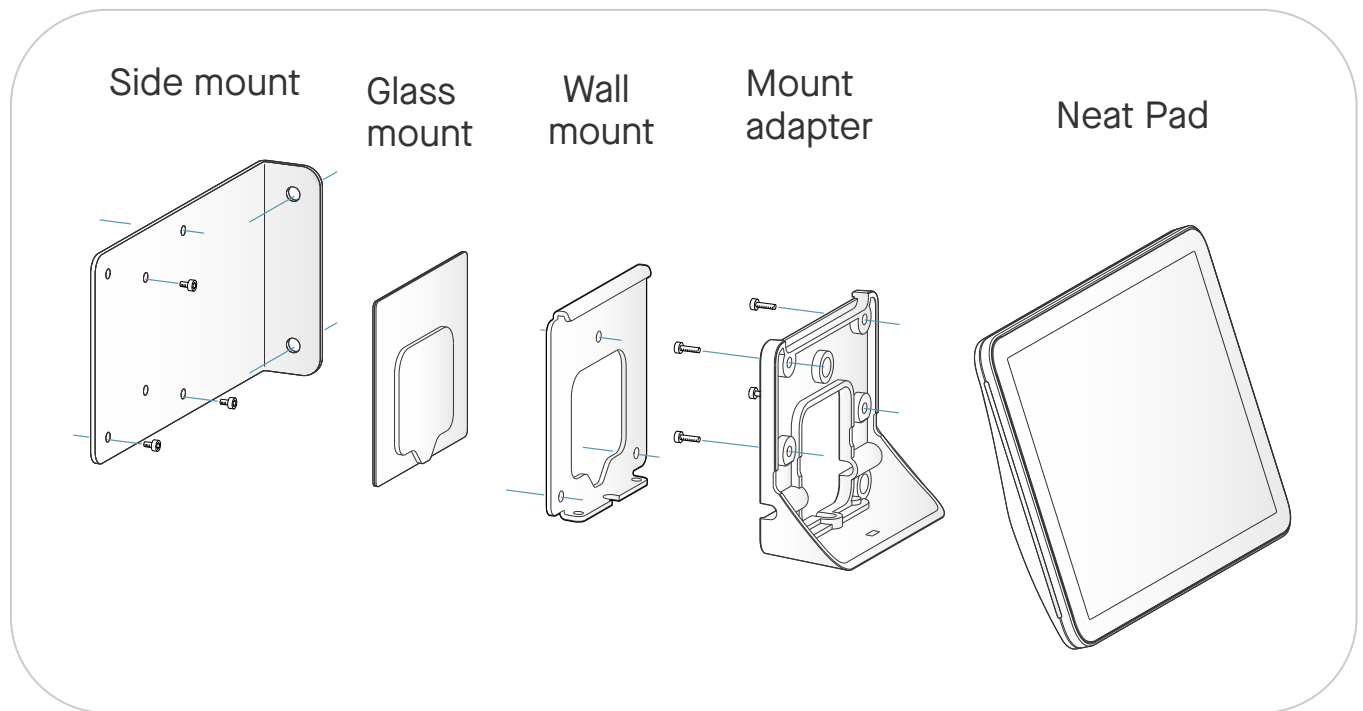

Connecting: 1. Slide the lid open.

2. Pull the lid back to access the connector. Route and connect the Ethernet cable.

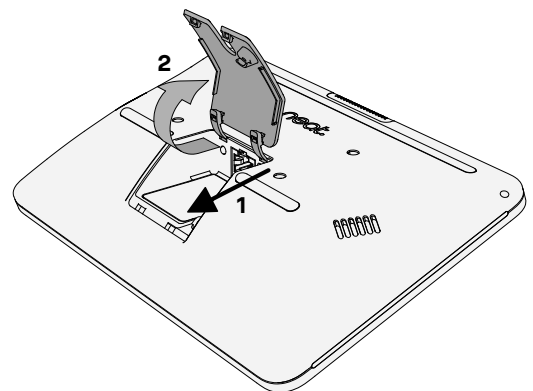

Screws for mounting to the wall are not included. Mounting on a wall should only be performed by qualified personnel in line with applicable facility and state regulations. The wall and the mounting equipment must safely withstand the load of the product.

Mounting options

Wall mount kit (sold separately)



Hex key: 2 mm

Hex key: 2.5 mm

4 × M4 screws (0.30 inches / 7.5 mm)

Mount adapter

Wall bracket

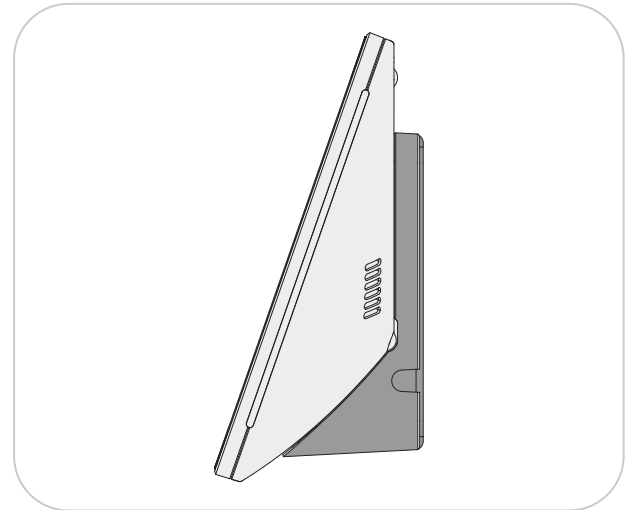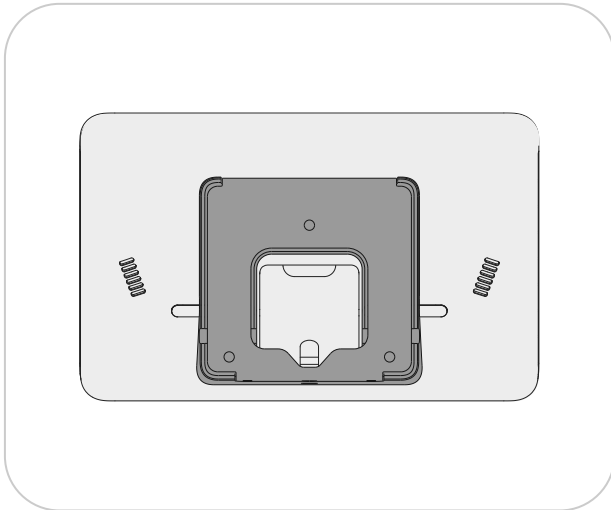

Side mount kit (sold separately)

Hex key: 2 mm



Hex key: 2.5 mm

4 × M4 screws (0.30 inches / 7.5 mm)

Mount adapter

Wall bracket

Side mount

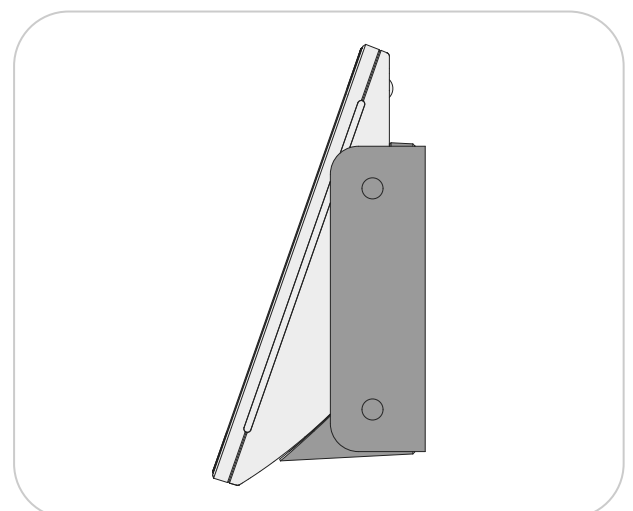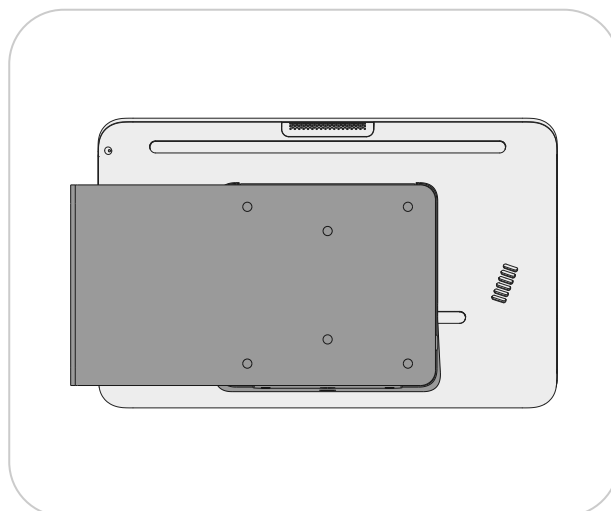

Mounting options

Glass mount kit (sold separately)

Hex key: 2 mm

Hex key: 2.5 mm

4 × M4 screws (0.30 inches / 7.5 mm)


Wet wipe

Mount adapter

Wall bracket

Glass mount

Set square (mounting aid)

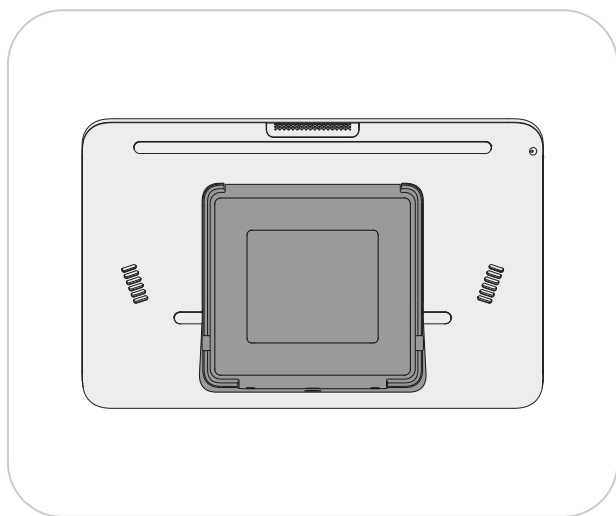

Size and weight



Neat Pad Generation 2

Width: 7.90 inches (200 mm)

Height: 2.00 inches (51 mm)

Depth: 4.90 inches (125 mm)


Weight: 1.20 pounds (0.54 kg)

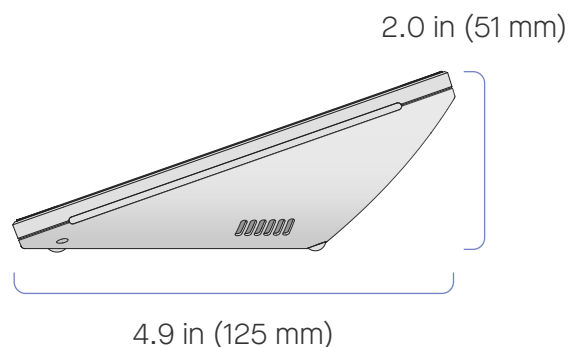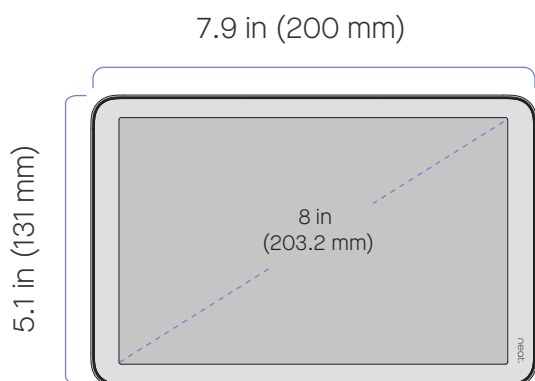

Setup and connectivity

Setup

Use the provided cables to set up Neat Pad Generation 2. Connect the cables according to the illustration. Cables marked — are included. Cables marked ---- are optional and not required for basic use of the system.

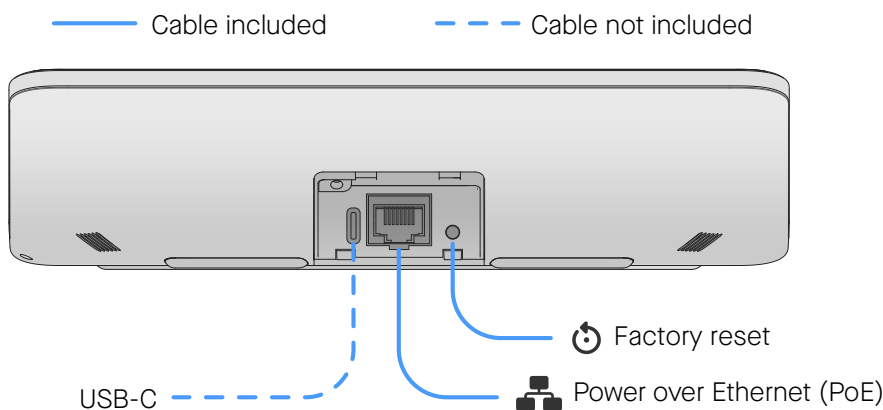

Requirements for a complete setup

PoE network or
PoE power supply

Networking and ports

Wi-Fi 6
USB-C (for debug only)
Ethernet (PoE)

Environmental requirements

Ambient operating temperature:
32–95 °F (0–35 °C)
Storage temperature: -4–140 °F (-20–60 °C)
Relative humidity: 10–90%

Additional product information

<https://neat.no/pad-2>

Neat Pad Generation 2 – User manual 01
Trademark: NEAT